

# PRESSURA™ MODEL NSD8 REMOTE MONITOR ACCESSORY

## Description

The Model NSD8 PRESSURA™ Remote Monitor Accessory is designed as a remote interface for TSI PresSura Monitors and Controllers. The PresSura Remote Monitor Accessory displays room mode and status for up to eight rooms. The NSD8 Remote Monitor Accessory can configure the room mode of connected monitors and controllers from Positive/Negative to No Isolation Mode.

## Features

- Display eight rooms at one time
- Compatible with any TSI PresSura RPM10/RPM20 Monitor or RPC30 Controller
- Audible and visual alarms
- Change room mode to No Isolation Mode when pressure direction is not critical
- Autodiscover to automatically find connected monitors and controllers
- Communications outside of BAS, reducing BAS network traffic

## Items Included

- Digital interface module



## Digital Interface Module Specifications

<b>Number Rooms Displayed</b>	8
<b>Room Modes Displayed</b>	Positive Mode, Negative Mode, No Isolation Mode
<b>Touchscreen Display</b>	4.3 inch (10.9 cm) diagonal 16:9 aspect ratio, QVGA
<b>Dimensions</b>	7 inch x 4.875 inch x 1.75 inch (17.8 cm x 12.4 cm x 4.4 cm) 0.625 inch (1.6 cm) protrusion


<b>Operating Temperature</b>	32 to 120 °F (0 to 50 °C)
<b>Weight</b>	14 oz (0.40 kg)

*Specifications subject to change without notice.*

## Power Requirements

<b>Digital Interface Module (DIM) Each</b>	24VAC, 50/60 Hz, 3VA
--	----------------------

## Dimensions

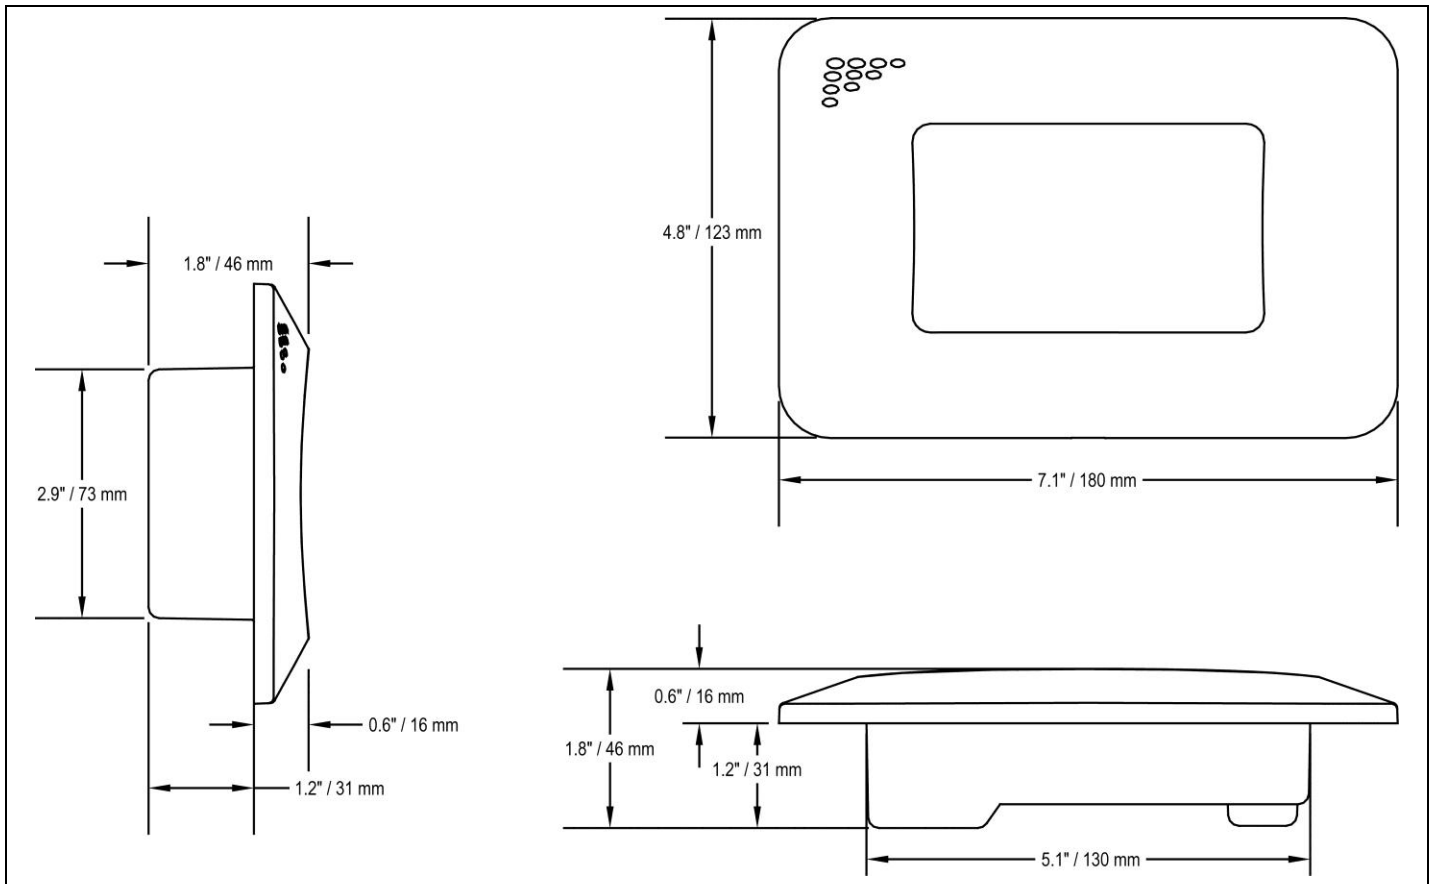

TSI and TSI logo are registered trademarks of TSI Incorporated.  
PresSura is a trademark of TSI Incorporated.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website [www.tsi.com](http://www.tsi.com) for more information.

<b>USA</b>	<b>Tel:</b> +1 800 874 2811	<b>India</b>	<b>Tel:</b> +91 80 67877200
<b>UK</b>	<b>Tel:</b> +44 149 4 459200	<b>China</b>	<b>Tel:</b> +86 10 8219 7688
<b>France</b>	<b>Tel:</b> +33 1 41 19 21 99	<b>Singapore</b>	<b>Tel:</b> +65 6595 6388
<b>Germany</b>	<b>Tel:</b> +49 241 523030		